

Sunpro Brand by Arizona RV Parts, Inc

Windshield Cover Installation Instructions

Special Note: Please take the time to align the windshield & side window covers before installing. The windshield cover & side covers will have a “Good Fit” if installed properly. The most common mistake made during installation is from not aligning the covers properly. Quite often the windows covers are being installed on the wrong side, inside out or upside down, please pay attention.

Windshield Cover Kit: (If you requested Dual Lock Start at step #4)

1. Locate the center of your windshield, then center the windshield cover over the windshield and hold it in place by using masking tape & the wiper blades. This will help to insure a proper fit. Make sure the windshield cover fits snug before marking the RV for pilot holes. After making sure of a snug fit then mark & drill the top center snap/twist lock pilot hole.
2. Apply a small amount of silicone to the thread of the top center snap/twist lock then tighten. (Do not over tighten)
3. With the top center snap/twist lock now fastened, mark and drill the remaining pilot holes working from the center outward while keeping the windshield cover snug and wrinkle free.
4. If you requested Dual Lock follow steps 1 thru 3 except without the drilling of pilot holes, as none are needed. Clean the mounting surface of the RV thoroughly with rubbing alcohol before attaching the Dual Lock.


Side Window Installation:

1. When installing the side window covers you must hold them up to the window and make sure they are straight and level and tape in place with masking tape. Then mark the top front and install the snap/twist lock using the same method as the windshield cover kit.
2. Pull the side cover snug toward the rear and install the top rear snap/twist lock, and then install the bottom fasteners.

Please Note - Please ensure a proper fit before drilling and only use the proper size drill bit and pay close attention to each step, this will better ensure that you do not drill a hole in the wrong place. Sunpro Manufacturing & Arizona RV Parts, Inc. will not be held responsible for an improper installation of any kind.

www.sunpromfg.com

If you are unsure of any step please call and ask for help! 800-789-5588

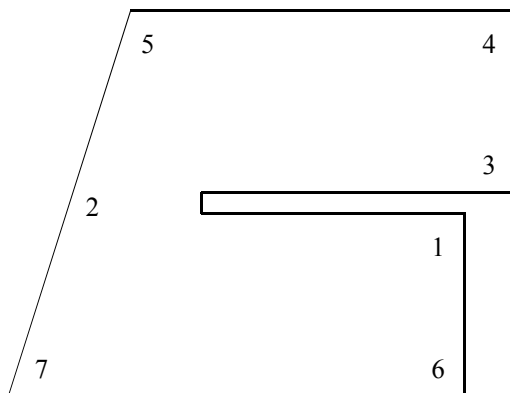

Some of our Driver Door covers are provided with a slit that allows you to open the door without taking them off. Please install in the order indicated for a better fit.