

Sunpro Brand from Arizona RV Parts, Instructions for Side Window Covers

Measuring Instructions:

Please Note: Take your time measuring for side windows. Decide which window you want to start with and work your way around the RV.


Make a drawing of each window and write down the width and height for each window you want to cover. Measure from the outside of frame to outside of frame. DO NOT measure the glass.

If your Window Covers are going to overlap the window frame then add the amount of material that will accommodate for that. DO NOT expect us to know how much to add. We do recommend adding 1 1/2" all the way around if it will not interfere with anything.

Some windows are raised from the side of the RV a 1/2" or more and in this case please consider this when giving us your measurements. *Please give us Your Finished measurements.*

Installation Instructions:

- 1) Determine the center of the window horizontally and vertically and mark with a pencil. It is best to mark the window frame and the side of the RV 2 to 3 inches from the window frame.
 - 2) Determine the center of the Window Cover horizontally and vertically and mark lightly with a pencil. If the measurements are correct, the marks on the side of the RV and the Window Cover should match when the cover is held up to the window. If not remeasure.
 - 3) Place the Window Cover so it lines up with the marks on the RV and determine which corner you want to install first and mark where to drill for the first fastener. Then after rechecking your alignment install the fastener. **Please Note:** *If your cover has a fastener in the center of the top it is usually best to start with it and then work out to the corners.*
 - 4) Do the same process for the rest of the corners. Use an eraser to remove pencil marks.
- Always pull the fabric snug to remove any wrinkles. If you take your time you should end up with a professional looking installation.

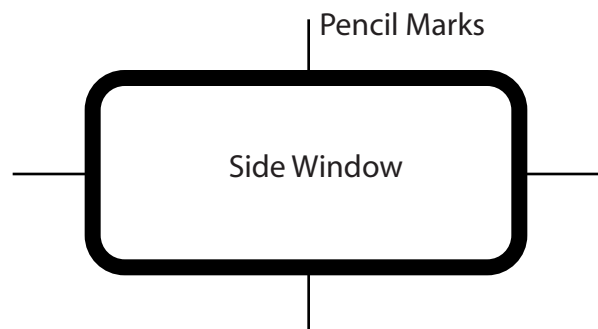

If you are not sure of something email, mail, or fax us a picture. If you have any problems please call us or send us an email. Emails are monitored when we are closed so be sure to include a phone number and somebody should be able to help you finish the installation. If you need an RV Tech to do the installation we might be able to recommend one.

To view our complete line of sun control products, please visit our web site @ www.SunProMfg.com
or Call Us @ **800-789-5588**